


CERTIFICATE

CHECK _____

DATE _____

SMART TOILET

INSTRUCTIONS FOR USE AND INSTALLATION

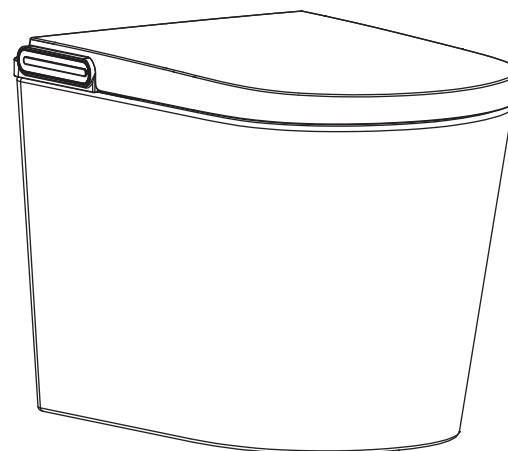

PRE-READING INSTRUCTIONS

1. Please read this manual carefully before installation and use;
2. The appearance of the product is subject to the actual..
3. For product functions, please refer to the configuration of the model actually purchased.
4. Please keep the instruction manual properly and take it out to read when necessary.


The company reserves the right to interpret this instruction manual. If there are changes to products and technical parameters without further notice, please refer to the latest version of the instruction manual.

Ver: B-S040 2.0


CONTENT

ACCESSORIES LIST	02
TOOLS PREPARATION	02
PRODUCT INTRODUCTION	03
SAFETY PRECAUTIONS	04
INSTALLATION PRECAUTIONS	07
PRODUCT DIMENSION	08
INSTALLATION STEP	09
REMOTE CONTROL OPERATING	12
KNOB OPERATION INSTRUCTIONS	15
OTHER FUNCTIONS DESCRIPTION	16
SMART TOILET VOICE CONTROL COMMANDS	17
MAINTENANCE	18
TROUBLESHOOTING	20
PRODUCT SPECIFICATIONS	21
WATER EFFICIENCY	22
WARRANTY CARD	23


ACCESSORIES LIST

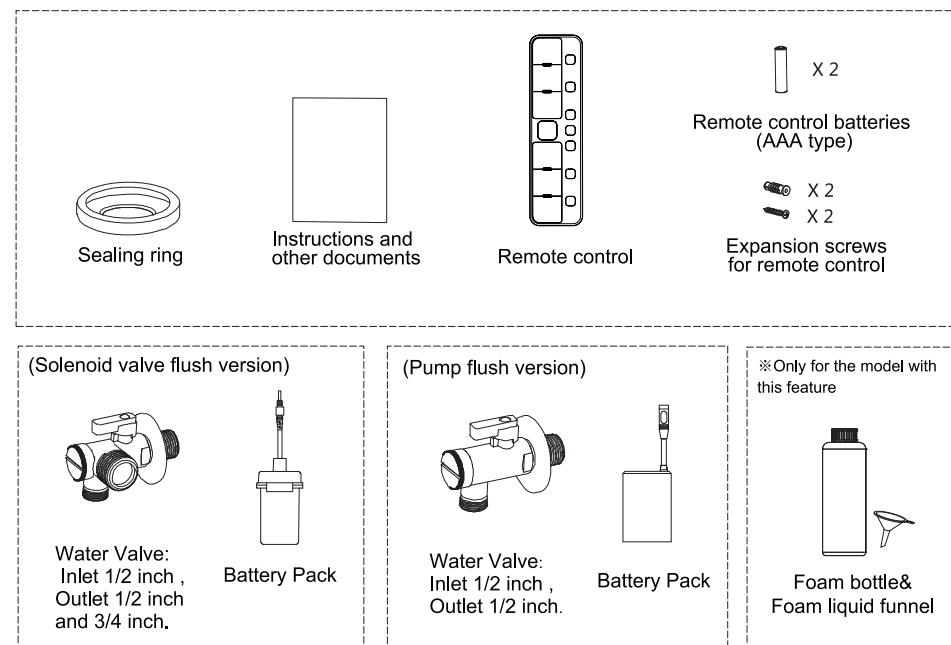

TOOLS PREPARATION

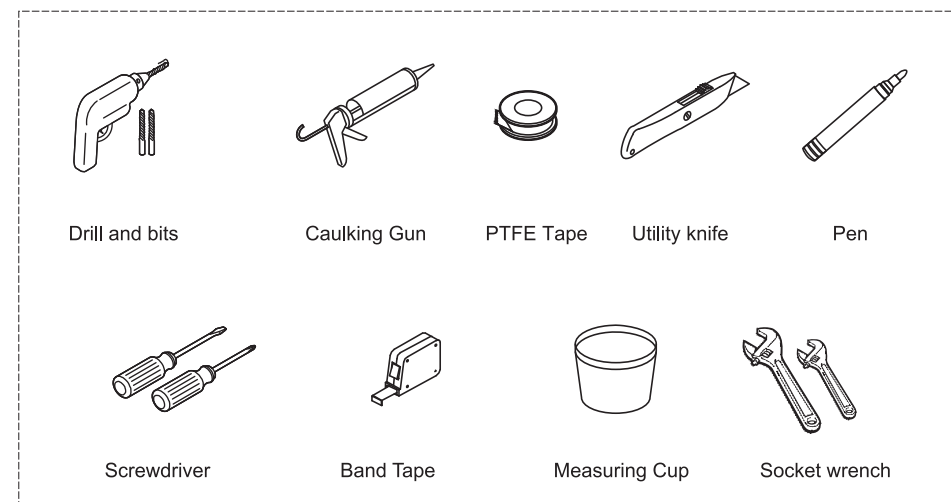

PRODUCT INTRODUCTION

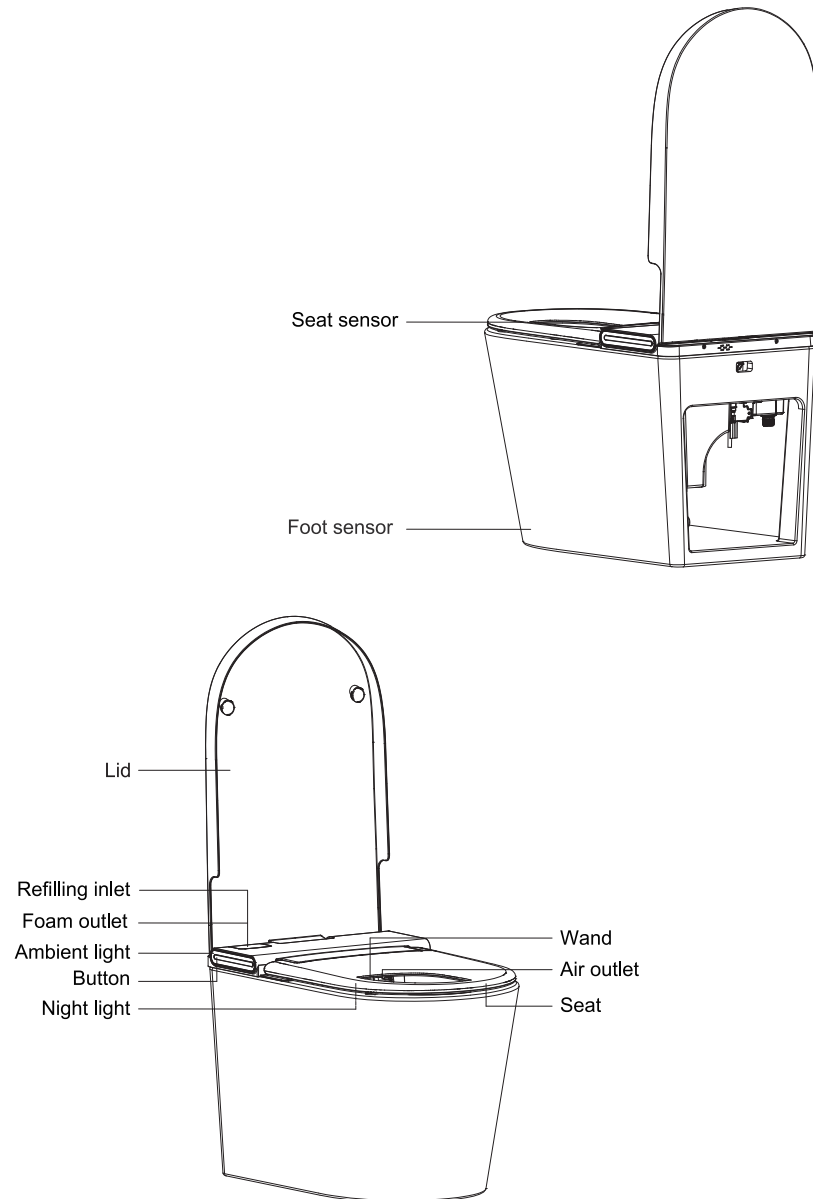

Note: Above parts are just one of the appearance for smart toilet. Different models may have slightly different appearance and functions. Please refer to the actual product.


SAFETY PRECAUTIONS

Be sure to carefully read this "Safety Precautions" document before beginning installation.	
Please comply with all safety warnings and precautions.	
 Warning	This symbol indicates misuse may result in death or serious injury.
 Caution	This symbol indicates misuse may result in injury or physical damage.
 Warning	Do not use this product with any power supply other than the one specified. Doing so may result in heat or fire.
	When installing this product, comply with the regional codes and standards on installation work.
	Do not turn on the electricity and water supply for the product until installation work is complete.
	Before installing this product, keep the main inlet valve closed to avoid property damage caused by water leakage.
 CAUTION	Comply with all local plumbing and electrical codes . Power and water pipes should be wall mounted.
	The length of power cord is approximately 1.5 meters. install the power socket within the reach area of power cord . Socket should be higher than floor where it will not be easily wet by water.
	Inspect the smart toilet carefully to check is there any damage.
	In winter, when the product is transported over long distances or stored for a longtime, the remaining water in the product may freeze. in order to prevent damage caused by freezing, the product must be placed in a warm room for 30 minutes to allow it to defrost naturally before installation as well as water and electricity connection.

SAFETY PRECAUTIONS


Warning		
 Must be obeyed	● Refrain from sitting on the seat for long periods. it may cause low-temperature burns. To prevent the following persons from getting amoderate temperature burn during use, other person should turn off the toilst seat heater. ①Young children, the aged and other users unable to set the temperature appropriately themselves. ②The ill, physically disabled and others who do not have freedom of movement. ③Those using any medicines that cause drowsiness (sleeping or cold medicine).- those who have been drinking heavily, anyone severely fatigued and anyone else liable to fall asleep.	
	● Make sure the power plug is fully plugged into the outlet.If not fully inserted, it may cause electric shock or fire.Do not connect the power supply when cleaning.	
 Forbidden	● Do not use the product if a malfunction occurs. in case of breakdown or other problem, be sure to cut off power by means such as unplugging the power plug.	No wet hand 
	● Do not continue to use the product if it malfunctions In the following situations, please unplug the power plug and close the water inlet valve.	
	● Do not do anything that may damage the power cord, power plug. Using a damaged power cord may result in a fire, electrical shock, heat or short. ① Do not strike, yank, twist, excessively bend, damage, alter, or heat the power cords. ② Also, do not place anything heavy on, bind or pinch the power cords.	
	● Do not use other water then allowed by the laws and ordinances of the region of use. Only Use drinking water.Do not use seawater or recycled water. Doing so may cause irritation to the skin and malfunction.	
	● Patients with pacemakers should not use this product Otherwise,electromagnetic interference will be generated, which may damage the function of the pacemaker and causelife-threatening consequences.	
	● Keep cigarettes and other open flames away from the product.Otherwise it may cause fire accidents.	
	● The appliance is not to be used by persons(including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction.Do not apply strong force, mechanical shock, step on or standon the toilet seat, toilet lid or main unit. Doing so may damage the product and cause injury or water damage.	

 SAFETY PRECAUTIONS

Notice		
 Forbidden	● Do not lean against the toilet lid.	
	● Do not expose to direct sunlight.(Doing so may cause changes in color, irregular heated seat temperature, remote control malfunction or the product malfunction due to the change in temperature.)	
	● Please do not impact the ceramic bowl to prevent damage and leakag.	
	● Do not fold or crush the water supply hose; do not damage by cutting with a sharp object. Doing so may cause water leaks.	
	● Do not flush anything other than bodily waste and toilet paper. Also, do not flush too much toilet paper, Doing so may clog the toilet, causing waste water overflow and water damage.	
	● Do not close the lid and toilet seat violently. Doing so may damage the product.	
 Must be obeyed	● To prevent a sudden water leak, do not remove the water filter drain valve when the shut off valve is open.When installing the water filter drain valve, make sure that it is securely tightened in its proper position. Failure to securely tighten it may cause a water leak.	
	● Never operate this product if it has a damaged cord or plug, is not working properly, has been dropped or damaged, or has been dropped in water.	
	● When the ambient temperature is likely to drop to 32 °F (0 °C) or lower regulate the room temperature to prevent damage to the pipes and hoses.	
	● Do not wipe the product body with dry cloth or toilet paper otherwise it may cause scratches on the product.	
	● Do not use it when water and electricity are not connected, otherwise the product won't unction properly and usage will be affected.	
	● Do not lift up this product by the toilet seat or lid.	
	● Do not pour urine on the toilet body and nozzle, otherwise it may cause malfunction or cause pink or brown stains.	
	● Do not touch the power plug during thunder storms. Doing so may cause electrical shock.	
	● When traveling or not using the product over an extended period of time, drain the water out of the main unit and the water supply hose after closing the water shutoff valve, and pull the power plug from the outlet	

INSTALLATION PRECAUTIONS

	● Never disassemble, repair or alter, Doing so may cause fire, electrical shock, overheating, short circuit or breakdown.
	● Do not pour water on the product and plug, otherwise it may cause fire or electric shock.
	● This is an electrical product. Do not install it anywhere water is likely to get on the product or anywhere with humidity high enough that water is likely to form on the surface of this product. When using the product in a bathroom, install a fan or ventilation port and ensure good air flow through the bathroom. ● Please set the power socket as follows. Failure to follow the requirements may cause fire or electric shock. ① The rated power of the socket must be higher than 2kW; ② The socket should be installed at a place higher than 0.8m from the ground, as far away from the bathtub or shower as possible.

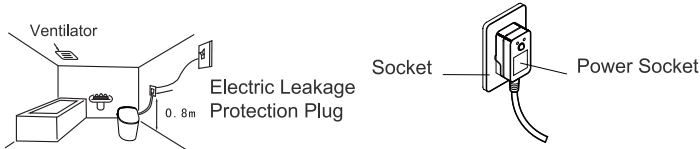

● Do not use loose or faulty sockets, as this may cause fire or electric shock.

Water Supply Conditions

(※ Pump flush version)

1. The water pressure for flushing should be 0.08MPa~0.75MPa,
2. The water pressure for cleaning should be 0.08MPa~0.75MPa.


(※ Solenoid valve flush version)

1. The water pressure for flushing should be 0.15MPa~0.75MPa,
2. The water pressure for cleaning should be 0.15MPa~0.75MPa.

If above conditions are not met, the corresponding functions can't be achieved normally;
when other products such as faucets are used at the same time, the conditions must also be met.


Installation Space Confirmation

- Drain outlet spacing 290mm to 380mm:
Recommended trap size is 305mm toilet.
- Drain outlet spacing 280mm to 290mm:
install a shiftflange to accommodate a trap size of 305mm toilet.
- Drain outlet spacing more than 390mm:
Recommended trap size is 400mm toilet.

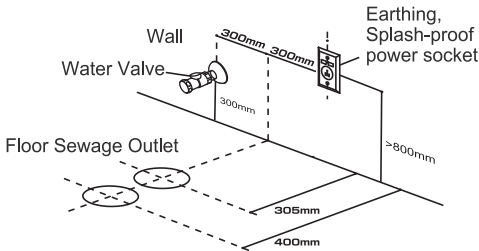


PRODUCT DIMENSION

Unit: mm

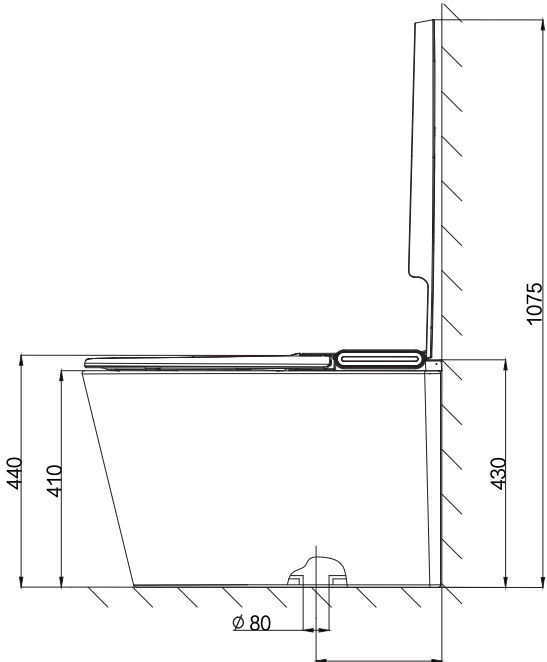


A: 305mm / B: 400mm

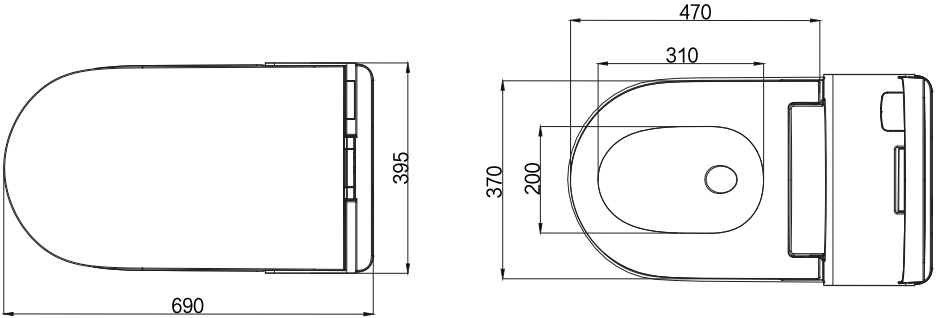

INSTALLATION STEP


Inlet valve installation instructions

1. Connect the hose to the valve: Ensure that a flat rubber gasket is used between them to prevent leakage.
2. Turn on the valve: After connecting, turn on the valve and carefully check for any water seepage or leakage. It's crucial to ensure there are no leaks before proceeding to test the smart toilet. Additionally, before installation, it's recommended to drain the hose and the toilet tank to clear any debris such as sand, gravel, or dirt that may be inside. This helps prevent potential clogs or issues with the system.

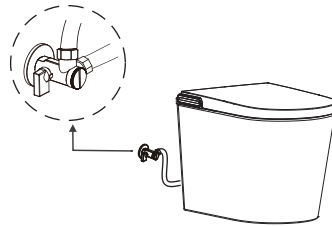

How to use the backup battery to flush during a power outage

1. Open the rubber cap of the emergency flushing port on the side of the smart toilet.
2. Take out the backup battery pack from the installation box.
3. Insert the battery pack.

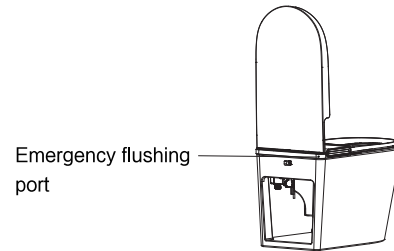

Remote Control Installation


Method 1

(Apply for smooth tiles, glass and smooth wall).

1. Choose proper installation location (Not easy to get wet, easy to take out or operate).
2. Clean the dust, oil stains, water droplets etc. on the installation wall.
3. Peel off the adhesive tape on the back of the remote control bracket, align the position, and press evenly for 1-2 minutes to make it stick tightly. Place the remote control after 12 hours from installation.

Method 2


1. Choose proper installation location.
2. Fix the bracket on the wall by using the screws and plugs provided.
3. Place the remote control on the bracket.

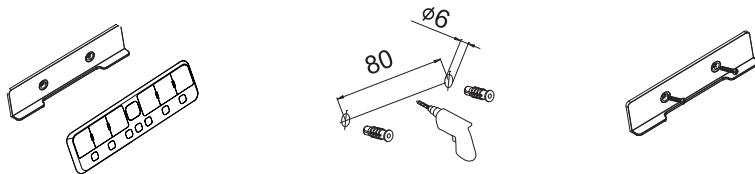


INSTALLATION STEP

A-Install smart toilet


1. Cut off the sewage pipe which is higher than the ground. Keep the sewage pipe approximately 3-5mm higher than the ground.

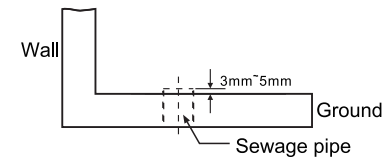


2. Disassemble the old water valve and install the new valve we provided. Before disassemble the old valve, turn off the water supply situation.

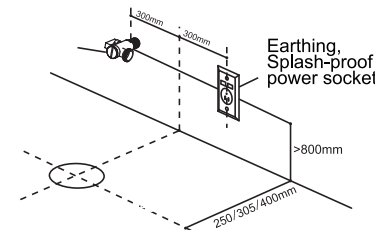


3. Clean and dry the floor. The cleanliness and dryness of the floor will affect the firmness of the product installation.

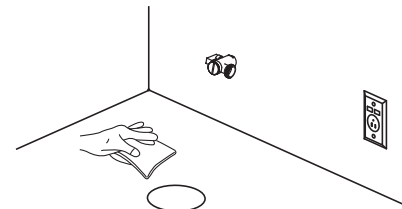


4. Use a mark pen to draw a cross mark on the center line of the floor sewage outlet.

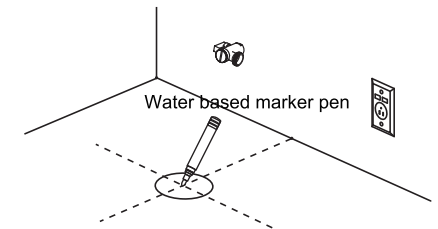

5. Draw lines on the left, right and front of the toilet surface, corresponding to the center of the sewage outlet. The smart toilet is lay on a foamboard.

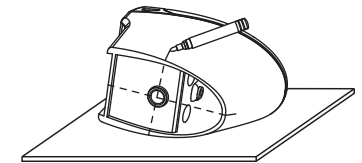


6. Install the flange ring on the drain outlet of toilet. Please note the installation direction of the

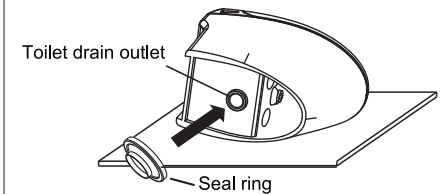

7. Lift up the toilet and place it on the ground so that the two marks coincide. Then, press the toilet downwards to make the seal ring fully sealed.

Do not move the toilet or shake it left or right after installation, otherwise the sealing may be damaged, resulting in water leakage.

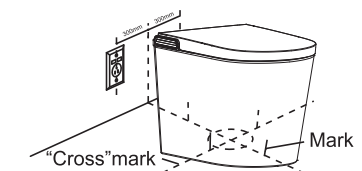

REMOTE CONTROL OPERATING

FUNCTION		FUNCTION DESCRIPTION
Remote code matching		"Within 10 seconds of powering on, press and hold the [Rear Wash] and [Bubble Shield] buttons simultaneously. The device will beep twice to confirm successful pairing."
1		When a function is running, Short press the [Stop] key to stop the currently running function (except for seat/lid lifting and flushing). Long press the [Stop] key for 3 seconds to turn the unit on or off.
2		In the seated position: Short press the [Rear Wash] key to start the rear wash function. Short press again to activate oscillating cleaning
3		In the seated position: Short press the [Bidet Wash] key to start the bidet wash function . Short press again to activate oscillating cleaning.
4		While seated, short press the "Drying" button to start the drying function. During drying, short press "Drying" button to select the level of air speed from the first / second / third / fourth / fifth level; During seating, long press "Drying" button to start the fifth air speed drying.
5		Short press the [Lid/Seat] key: Press once to lift the lid. Press again to lift the seat. If the seat is open for more than 6 seconds: Closing the lid and seat will trigger flushing. If the seat is open for less than 6 seconds: The seat will cycle open and close (toggle). Long press to close the lid.
6		When no other functions are running: Short press the [Flush] key to start the flushing function.
7		Short press the [Forward] key to adjust the nozzle position forward by one level. Short press the [Backward] key to adjust the nozzle position backward by one level. 3 levels are adjustable.
8		In modes other than Four-Season Temperature Sensing: Short press the [Water Temp] key to switch the water temperature between 4 levels.
9		When no other functions are running: Short press the [Foam Shield] key to start the foaming function. Long press the [Foam Shield] key to turn the "Auto Foaming upon Seating" function on or off. (Buzzer beeps once when turned on, and twice when turned off).
10		In modes other than Four-Season Temperature Sensing: Short press the [Air Temp] key to switch the air temperature between 4 levels.
11		Short press the [Water Pressure +/-] key to cycle through the cleaning pressure levels. 3 levels are adjustable.

REMOTE CONTROL OPERATING

12		During cleaning: Short press the [Massage] key to activate massage cleaning. The water pressure will cycle from high to low.
13		In modes other than Four-Season Temperature Sensing: Short press the [Seat Temp / 4-Season] key to switch the seat temperature between four levels. Display: - -> 34°C -> 37°C -> 39°C. Long press the [Seat Temp / 4-Season] key to turn the Four-Season Temperature Sensing mode on or off. (Buzzer beeps once when turned on, and twice when turned off). Four-Season Temperature Sensing Mode: Water temperature, air temperature, and seat temperature are automatically adjusted based on the ambient temperature. (While seated, you can manually adjust the function temperatures. The settings will revert to the Four-Season mode after the function ends).
14		Short press the [Night Light / Ambience Light] key to turn the night light / ambience light on or off. Long press the [Night Light / Ambience Light] key to turn the Auto Ambience Light mode on or off (enabled by default). Auto Ambience Light Mode: If no functions are operated for 2 minutes, the unit will automatically enter sleep mode (ambience light off, night light off, display off). It will wake up upon any operation. (Buzzer beeps once when turned on, and beeps long once when turned off).
15		When not seated: Short press the [Self-Clean] key to start the nozzle and spray head auto-cleaning. Short press again to turn the nozzle reciprocating motion on or off. (Self-cleaning automatically ends after approximately 2 minutes).
16		During use: Short press the [M] key. The remote control will display U1 or U2. The current function will then use the memorized settings of U1 or U2. Memory Mode: While U1 or U2 is displayed, adjust the water temperature, seat temperature, water pressure, and nozzle position as desired. Long press the [M] key again to save the current settings.
17		When not seated: Short press the [Deodorization/Air Freshening] key to activate deodorization for 2 minutes. Long press the [Deodorization/Air Freshening] key to turn on the Air Freshening function.

BUTTON OPERATION INSTRUCTIONS

Button definition	Button function
Front Wash  Rear Wash 	
Stop  Drying/Flushing 	
	While seated, short counterclockwise rotate to start rear washing function.
	While seated, short clockwise rotate to start front washing function.
	If no function is in operation, press to flush. If seated state, press to start the drying function.
	If any function is in operation , press to stop the current function.

OTHER FUNCTIONS DESCRIPTION

FUNCTION	FUNCTION DESCRIPTION
Foot touching button	※ Only for the model with this feature. If not seated, short touch the foot switch to start the flushing function.
	(※ Only for the model with this feature.) While lid is close , short touch the foot sensor to open the lid. While lid is open and seat is close , short touch the foot sensor to open the seat. While lid and seat are open, if seat opening time is less than 6 seconds , short touch the foot sensor to close the seat, if seat opening time is more than 6 seconds, short touch the foot sensor to close the lid and seat then perform flushing.
Wet The Toilet Bowl After Seated	Seating for 2 seconds,once seated again, the upper water nozzle flushes automatically to pre -wet the inner surface of the toilet bowl.
Flushing After Leaving seat	(※ Only for the model with this feature.) Close the lid and flush after leaving the seat for 10 seconds. (Perform half flush if seating time less than 2 minutes, perform full flush if seating time more than 2 minutes.)
	(※ Only for the model with this feature.) Perform flushing after leaving the seat for 5 seconds. (Perform half flush if seating time less than 2 minutes, perform full flush if seating time more than 2 minutes)
Automatic Deodorization Function	Once human seated, it automatically starts the chemical catalyst deodorization device.
Automatic Open Lid	(※ Only for the model with this feature.) When approaching the toilet , it opens the lid automatically. when no people approaching more than 2 minutes, it closes the lid automatically. (If seat is opened more than 6s , it closes the lid and flushing.)
No-power Flush	In the state of power outage, shore press the button to start the flushing function.

SMART TOILET VOICE CONTROL COMMANDS


(※Only for the model with this feature.)

FUNCTION	COMMAND	REPLYING BY TOILET
Wakeup word	Hi Mate	Hi,I am here!
Lid	Open the lid	OK
	Close the lid	OK
Seat	Open the seat	OK
	Close the seat	OK
Wash	Rear wash	OK
	Female wash	OK
Drying	Start drying	OK
	Stop drying	OK
	Start drying	OK
Stop	Stop	OK
Spray	Wand forward	OK
	Wand backward	OK
Flush	Flush	OK
Water Temp	Increase Water Temperature	OK
	Decrease Water Temperature	OK
Seat Temp	Increase Seat Temperature	OK
	Decrease Seat Temperature	OK
Massage	Start Wand Massage	OK
	Stop Wand Massage	OK
Air Temp	Increase Drying Temperature	OK
	Decrease Drying Temperature	OK
Water Pressure	Increase Water Pressure	OK
	Decrease Water Pressure	OK
Light	Turn on the Night Light	OK
	Turn on the Ambient Light	OK
	Turn off the Night Light	OK
	Turn off the Ambient Light	OK
ECO	Turn on Power save mode	OK
	Turn off Power save mode	OK
Speaker on/off	Enable Speaker	OK
	Disable Speaker	OK
Volume adjustment	turn volume up	OK
	turn volume down	OK
Bubble	Start Bubbling	OK

Automatically exit voice control if no more commands for 15 seconds;
The smart toilet announces " I am off! Goodbye " and then exits voice control mode.


MAINTENANCE

1. Do not add water or detergent to the electrical part of the smart toilet or inside of the remote control. Do not get the electrical parts and power plug wet with water or detergent. Otherwise there may be a risk of electric shock and fire.

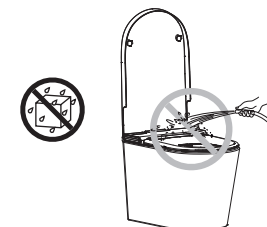


2. Please wipe with a soft cloth soaked in a diluted, neutral kitchen detergent. Then, wipe it with a soft cloth soaked in water so that no detergent remains.

※Do not use inappropriate cleaning agents, such as: toilet cleaners, bleach, alcohol, deodorizing powder, gasoline etc.

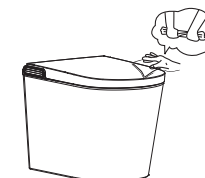


3. Please wipe the product with a soft, damp cloth. If the dirt is not removed in time, it will become difficult to clean. Please wipe with water frequently. In addition, wiping with water can prevent the generation of static electricity, which will absorb dust and make the product black and dirty.

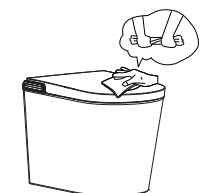

Nozzle cleaning and maintenance methods


- Self-cleaning: Short press "Self-Cleaning" to start automatic cleaning of the wand and nozzle.
- ※ If the nozzle is dirty, clean it with a toothbrush. Do not use too much force when brushing the nozzle, otherwise it will damage the nozzle.

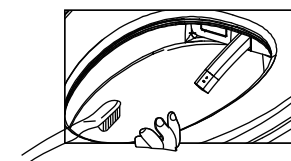

Filter maintenance

If poor spray performance occurs under normal conditions:

1. Turn off power and the angle valve.
2. Unscrew angle valve nut.
3. Remove filter net.
4. Clean out the filter net under running water using a toothbrush.
5. Reinstall filter net and angle valve nut.
6. Turn on the angle valve and connect the power.

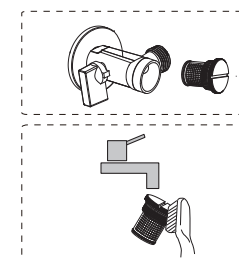


MAINTENANCE

Foam liquid adding:

1. open the rubber cap of the liquid filling port.
2. Put the funnel into the filling port, hold it, and slowly pour the foam liquid into the funnel with the other hand. (The liquid volume is less than 450 ml, Do not quickly pour the foam liquid into the funnel to avoid the foam liquid overflowing)
3. Cover the rubber cap.

※ Note: The foaming effect will not ideal in the first few uses. Because the pipe is empty inside.

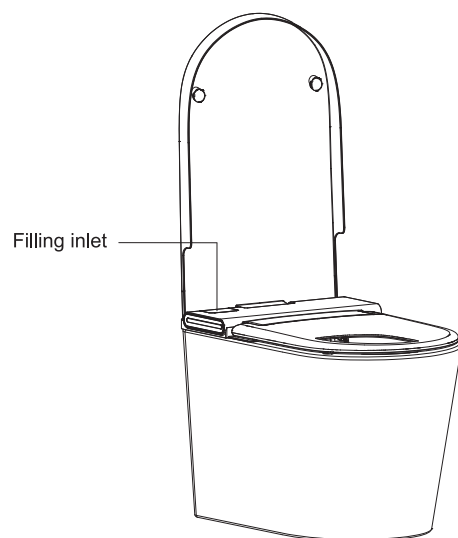

TROUBLESHOOTING

Please refer to the table below for the solutions of problems which might occur in using this product. If the problem still exists after trying the solutions below, please contact our customer service center for further help.

Problems	Possible Causes	Solutions
Product doesn't power on	Loose connction of power socket.	Check power socket.
	Product has been turned off.	Please try long-press of "Stop" button on remote control to turn on the
Washing function doesn't work properly.	Seat sensor can't detect people seating.	Please adjust the seating position.
	Water mains failure.	Please wait until water mains restored.
	Water inlet valve on the wall is turned off.	Turn on the valve.
	Filter is blocked.	Please clean the filter or replace it.
	Water supply pipe is trapped.	Reconnect the pipe.
Washing pressure is low.	Filter is partially blocked.	Please clean the filter or replace it.
	Washing pressure is set to a low level.	Please increase the washing pressure from remote control.
Washing suddenly stops.	Washing period has timed out.	Restart the washing function.
	Seat sensor can't detect people seating.	Please adjust the seating position, and restart the washing function.
Drying Temp is low.	Drying temperature is set to a low level.	Increase the drying temperature level from remote control.
Drying suddenly stops.	Seat sensor can't detect people seating.	Please adjust the seating position, and restart the drying function.
	Drying period has timed out.	Restart the drying function
Seat Temp is low.	Seat temperature is set to a low level.	Increase the Seat temperature level from remote control.
	Product is just being turned on.	Please give some time for temperature rise.
	Ambient temperature is too high when Auto-Temp mode is enabled.	Disable Auto-Temp mode and re-adjust temperature level.
Remote control doesn't work.	Battery is low.	Change batteries.
	Batteries are installed wrongly.	Reinstall the batteries according to the mark.
Flush is not working properly.	Filter is blocked.	Clean the filter.
	Water supply pipe problem.	Check the water supply pipe.
	The gap time between two flushes is less than 30 seconds.	make sure of more than 30 seconds gap time between two consecutive flushes.
	Drain is blocked.	Unblock the drain.

PRODUCT SPECIFICATIONS

Main Unit	Rated voltage	110V~/60Hz or 220V~/50Hz
	Rated power	1150W / 1050W
	Water proof	IPX4
	Power cord length	About 1.5m
Toilet	Flush volume	5.0L
	Flushing mode	Siphonic jet
	Rough-in	12 inches (305mm)
	Outlet outside diameter	≤ 3.1 inches (≤ 80mm)
	Drainage method	S-trap
	Water pressure range	0.08MPa~0.75MPa(Pump flush version) 0.15MPa~0.75MPa(Solenoid valve flush version)
Cleaning device	Heating mode	Instant
	Heating power	120V/1600W
	Water temperature	4-level adjustment
	Water pressure	3-level adjustment
	Cleaning mode	Rear washing/Oscillating washing, Front washing/Oscillating washing
	Nozzle position	5-level adjustment
	Water pressure protector	Pressure maintaining device, Automatic pressure relief device
	Anti-fouling device	Automatic nozzle cleaning, Anti-backflow device, Anti-syphon device, Filter device
	Safety device	Thermal fuse, Ground protection, Thermostat, Water temperature sensor, Over temperature protection.
Deodorization	Deodorization method	Photocatalyst-free
Drying device	Warm air temperature	4-level adjustment
	Heating power	230W
	Safety device	Thermal fuse, Thermostat, Wind temperature sensor

PRODUCT SPECIFICATIONS

Heated seat	Surface temperature	4-level adjustment
	Heating power	50W
	Burn protection	After 10 minutes of use, the seat temperature will automatically drop slowly to a low level
	Safety device	Seat sensor, Temperature sensor, Thermostat, Thermal fuse
Caring device	Night light assembly	Always on, Always off
	User ID setting	To avoid interference when used by multiple users
	Automatic flushing	Automatic flushing after use
	Foam Shield function	Splash-proof and odor-proof can be realized
	Foot sensor open lid	Foot sensor open lid/seat can be realized
	Foot sensor flushing function	Foot sensor flushing
	Auto-open lid function	Auto-open lid function can be realized
Antibacterial site		Seat, Nozzle

Rated power: Under the condition of ambient temperature 23°C / 73°F, water static pressure 0.18MPa±0.02MPa, water temperature 15°C / 59°F, power toilet on, set water pressure, seat temperature, water temperature to the highest level in turn and perform one rear washing cycle.

WATER EFFICIENCY

The energy and water efficiency levels of smart toilets are divided into three levels, the 3rd level is the lowest energy and water efficiency. The unit cycle energy consumption, average washing water consumption and average flushing water consumption of each level should comply with the provisions of Table 1.

Table 1 Smart toilet energy efficiency and water efficiency level indicators

Smart toilet energy efficiency and water efficiency levels			Level 1	Level 2	Level 3
Energy efficiency level index	Energy consumption per cycle/(kw.h)	With seat heating function	≤0.030	≤0.040	≤0.060
		Without seat heating function	≤0.010	≤0.020	≤0.030
Water efficiency level index	Average water consumption for washing/L		≤0.30	≤0.50	≤0.70
Note : For each water efficiency level, the average half-flush water consumption of a dual-flush toilet shall not be more than 70% of the maximum water consumption limit for full flushing.					
The energy efficiency and water efficiency level of this product is Level 2.					

WARRANTY CARD

Installation receipt

Warranty object	Complete machine
Product model	
Warranty period	(from the date of purchase)
Purchase date	
Install date	
Invoice number	
User name	
Contact number	
User address	

(This joint factory stub)

Installation receipt

Warranty object	Complete machine
Product model	
Warranty period	(from the date of purchase)
Purchase date	
Install date	
Invoice number	
User name	
Contact number	
User address	

(this joint store stub)

WARRANTY CARD

Respected user:

During the warranty period specified in this warranty card, when the smart toilet (hereinafter referred to as the product) fails, the user can take this card and a valid invoice to the dealer of the product you purchased for repair or request on-site repair service.

1. From the date of purchase, the user can use this card and valid invoice for free maintenance for faults caused by correct use within the warranty period.

2. Even within the warranty period, if it is one of the following (1)~(5), the repair fee (material fee and labor fee) shall be charged as appropriate:

(1) The situation where the matching warranty card and purchase valid invoice cannot be presented.

(2) Failures caused by failure to follow the usage and precautions given in the instruction manual.

(3) Failure and damage caused by self-disassembly, repair and modification.

(4) Failure and damage caused by external reasons such as force majeure.

(5) Damage caused by transportation, unloading, extrusion, etc.

3. The scope of responsibility of this warranty card is limited to the maintenance of the product, and does not assume any other responsibility. If the products beyond the warranty period need to be repaired and guaranteed, the door-to-door fee, labor fee and material fee will be charged as appropriate. If there is any unclear place, please consult the local dealer.

4. This warranty card will not be replaced if it is lost, please keep it properly.

(This link is saved by the user)